



Owner's Manual
NEXCAM COVER

BOONER 5 PANEL HW DAGGER BLIND COVER – SKU BD72083
MAVERIC 6 SHOOTER BLIND COVER – SKU MS72069

IMPORTANT NOTE:

- NEXCAM COVER (SKU BD72083) IS SPECIFICALLY DESIGNED TO FIT BOONER 5 PANEL HW (HORIZONTAL WINDOW) DAGGER BLIND.
- NEXCAM COVER (SKU MS72069) IS SPECIFICALLY DESIGNED TO FIT MAVERIC 6 SHOOTER BLIND.

 
HARD SIDED BLINDS SOLD SEPERATELY. BLINDS CAN BE PURCHASED DIRECTLY FROM MAVERIC BLINDS AT WWW.MAVERICKBLINDS.COM.



- Images are for reference only
- Blinds are not included and sold separately

**READ, UNDERSTAND,
FOLLOW ALL WARNINGS
AND INSTRUCTIONS BEFORE
ASSEMBLING, INSTALLING
OR USING THIS PRODUCT!**

Review additional instructions
online at Nexcam.com

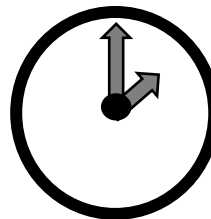

**Approximate
Assembly Time
0.5 – 1 Hour**

THIS OWNER'S MANUAL MUST ALWAYS ACCOMPANY THIS PRODUCT AND BE TRANSFERRED WITH IT UPON CHANGE OF OWNERSHIP, WHEN LOANED, OR PRESENTED TO ANOTHER PERSON.

INTRODUCTION

Thank you for purchasing our NEXCAM Cover. This product is designed by hunters, for hunters. It is engineered for safety, security, comfort, and stealth, putting the odds in your favor when the moment of truth arrives. Constructed with only the highest quality materials it's built for years of satisfying hunts.

Read this instruction manual and all warnings in its entirety before assembling, installing or using this product.


If you have any questions on assembly, use, safety warnings, or anything else, please contact us by email at support@Nexcam.com.

CONTENTS









Introduction	2
Warnings	3
No Alterations and Parts List	4
Installation Instructions	5-6
Use	7
Storage and Removal	7
Limited Warranty	8

Note: Before beginning installation of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.











 **WARNINGS****ATTENTION!**

WHEN YOU SEE A  SYMBOL OR THE WORD "WARNING!" BE SURE TO READ THE MESSAGE! THE INFORMATION CONTAINED IN THESE MESSAGES CAN SAVE YOUR LIFE OR PREVENT SERIOUS INJURY!! BE SAFE! FOLLOW ALL WARNINGS!! FAILURE TO FOLLOW ALL WARNINGS MAY RESULT IN SERIOUS INJURY OR DEATH!

 **WARNING**

-  **For your safety**, read and understand this user's manual in its entirety before attempting to assemble, setup, install and/or otherwise use this product. Contact NEXCAM by email at support@Nexcam.com for any questions. Minimally review contents of this user's manual annually.
-  **You must read, understand, and follow all Blind Manufacturers warnings and instructions before using this product!**
-  **Installation and Removal** of blind cover **MUST** be conducted at ground level with the blind at ground level. Failure to follow this instruction may result in serious injury or death!
-  **Use heat source at your own risk – FIRE AND CARBON MONOXIDE HAZARD IN ENCLOSED AREA –** Follow heat source instructions, warnings and use proper ventilation requirements. Failure to follow this instruction may result in serious injury or death!
-  **Always** keep all flame and heat sources away from fabric cover. The fabric may burn if in contact with any flame or heat source.
-  **Always** be sure there is adequate fresh air flow in blind.
-  **If you have problems with your cover or questions**, contact NEXCAM by email at support@Nexcam.com.
-  **Safe use of this product** is sole responsibility of the user to provide any person(s) who borrows, uses or purchases this product with the owner's manual and all warning prior to use. Do not allow a person to use this product(s) that has not reviewed all instructions and warnings. Failure to follow these instructions may result in serious injury or death! Store user's manual and warnings in a safe location where they can be shared with potential users and must be reviewed annually. If user's manual or warnings are lost, email support@Nexcam.com for assistance.

 **WARNING**

-  **Always** follow safe weapon/firearm handling practices.
-  **Operating a firearm** from inside the blind, be sure the barrel is outside the window, cover and curtain for your safety and protection.
-  **Never** shoot firearm or archery equipment through curtain or cover.
-  **Prior to each hunt**, make certain you have a signaling device (e.g., mobile phone, cell phone, radio, whistle, signal flare, Personal Locator Device [PLD], etc.) in your possession and on your person in an operable condition. This device must be within easy access should you experience the need to contact emergency assistance.
-  **Always** inform someone of hunting location, where blind is located, and expected duration of hunt. Have second adult present or at least accessible by cell phone or other means when using this product. Ability to get help quickly may save your life in an emergency.
-  **DO NOT** modify, fix/repair, alter, bend, cut, or heat this product in any way.
-  **For adult use only.** No one under the age of 18 should attempt to use this or any other NEXCAM product without direct adult supervision.
-  **Never** use this product while taking drugs (even prescription drugs) or alcohol.
-  **Never** use this product when feeling sleepy, ill, nauseous, dizzy or if you have prior medical condition that could cause a problem i.e., heart condition, joints that lock-up, spinal fusions, etc. or if you are not well rested or if you are not athletically fit. **Never** sleep in blind.
-  **Never** use this product during inclement weather such as rain, lightning, windstorms, snowstorms or icy conditions and end your hunt and return if inclement conditions arise.

NO ALTERATIONS OR MODIFICATIONS:

This product is designed to function properly in its original condition. Alterations or modifications can make it unsafe and constitute a misuse of the product. Do not alter, add, modify or substitute parts or accessories not made by NEXCAM. If a part(s) is missing and/or damaged, immediately email support@Nexcam.com for assistance.

PARTS LIST AND NOMENCLATURE:

Unpack and Check

Review & Confirm all items are included in Package Contents. If they are not, stop and e-mail support at support@Nexcam.com before continuing or using this product.

PARTS LIST AND NOMENCLATURE FOR BOONER 5 PANEL HW (HORIZONTAL WINDOW) DAGGER BLIND COVER:

1	NEXCAM Cover	Qty 1
2	Curtains	Qty 5
3	Curtain Fiber Poles	Qty 10
4	Ground Stakes	Qty 5

PARTS LIST AND NOMENCLATURE FOR MAVERICK 6 SHOOTER BLIND COVER:

1	NEXCAM Cover	Qty 1
2	Curtains	Qty 9
3	Curtain Fiber Poles	Qty 18
4	Ground Stakes	Qty 6

INSTALLATION INSTRUCTIONS:

Step 1:


Prepare blind (Sold Separately) for cover installation by closing door and all windows on blind.

IMPORTANT NOTE: Booner 5 Panel HW Dagger Blind – Make sure roof seam is located so roof seam starts from middle of 5th panel left of door panel and extends to other side of blind between 2nd and 3rd panels on right side of door. Cover is designed to fit seam in this location. If roof seam is not in this location, disassemble roof and reconfigure so roof seam is in this location.



Figure 1
Prepare Blind

**BOONER 5 PANEL HW DAGGER
BLIND ROOF SEAM LOCATION**

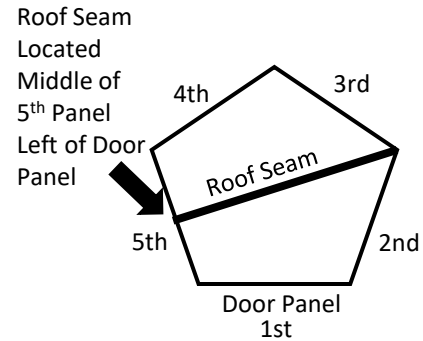

* Blind is not included and sold separately

Step 2:

Locate NEXCAM Cover and unfold cover so camo fabric is on outside. Unzip two sides of the cover by unzipping zipper up to roof.

Figure 2
Open NEXCAM Cover



Step 3:

Position NEXCAM Cover so door side of cover lines up with door. With 1 or 2 people pull blind cover overtop of blind and position so door and windows on cover line up with door and windows on blind.

Figure 3
Place NEXCAM Cover on Blind




Step 4:

Go inside blind and open windows. On inside of NEXCAM Cover (in between cover and blind) install fiber curtain rod in sleeve by sliding rod through upper sleeve (Velcro side) and insert other end into lower webbing sleeve. Repeat for other side of window.

Figure 4
Insert Fiber Curtain Rods on Cover

OPEN UPPER SLEEVE (VELCRO SIDE)

LOWER WEBBING SLEEVE

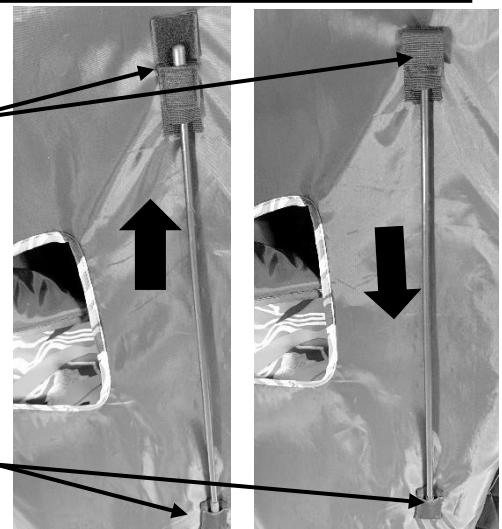

INSTALLATION INSTRUCTIONS:

Step 5:

Install Mesh Curtains by sliding rods up through upper sleeve (with Velcro) so other end of rod is out of lower sleeve. Slide mesh curtain bungee loops onto lower end of rod. Slide rod down into lower sleeve and place Velcro down on upper sleeve to securely lock fiber curtain rod in place. Repeat for other curtain rod. Stretch curtain overtop of window opening by sliding curtain on fiber curtain rods.

Repeat Steps 4 and 5 for remaining windows.

Note – Make sure loops are in line so curtain is flat when extended over window opening.



Figure 5 Installing Mesh Curtains

Step 6:

Attach Door onto blind door by removing Velcro corner flaps on cover. Place corner flaps overtop blind door corners, line up door handles with cover openings and secure with Velcro.

Figure 6
Attaching Door



Step 7:

Attach bungee loops and hooks to blind door sides and/or to blind door frame (if applicable). These are used to keep Cover tight to the door.



Figure 7 Secure Door with Straps

Step 8:

Zip front and back zippers of cover from roof down to bottom of blind. This will tighten entire cover up around blind.

Secure NEXCAM Cover to blind by inserting ground stakes through grommets on cover and anchoring to ground or by bolting / screwing cover grommets to blind platform.

NEXCAM Cover is installed and ready for use.



Figure 8 Secure Cover

USE:

⚠ WARNING

YOU MUST READ, UNDERSTAND, AND FOLLOW ALL BLIND MANUFACTURERS WARNINGS AND INSTRUCTIONS BEFORE USING THIS PRODUCT!

Use heat source at your own risk – FIRE AND CARBON MONOXIDE HAZARD IN ENCLOSED AREA – Follow heat source instructions, warnings and use proper ventilation requirements.

Always keep all flame and heat sources away from fabric cover. The fabric may burn if in contact with any flame or heat source.

Always be sure there is adequate fresh air flow in blind.

If you have problems with your cover or questions, contact NEXCAM by email at support@Nexcam.com.

Always follow safe weapon/firearm handling practices.

Operating a firearm from inside the blind, be sure the barrel is outside the window, cover and curtain for your safety and protection.

Never shoot firearm or archery equipment through curtain or cover.

Always inform someone of hunting location, where elevated platform is located, and expected duration of hunt.

Always have second adult present or at least accessible by cell phone or other means when using this product. Ability to get help quickly may save your life in event of an emergency.

Always take and use signal device (mobile phone, radio, whistle, signal flare or personal locating device – PLD) when using this product. Always keep signal device on you and readily available at all times.

FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH!

Enter blind with NEXCAM Cover installed by opening door. To open and adjust mesh curtain position, open blind window and slide curtain to desired position.

STORAGE:

Even though NEXCAM Cover is designed for years of outdoor use, it is recommended to remove NEXCAM Cover after hunting season is complete or if NEXCAM Cover will not be used for several months. Store indoors in a clean dry location out of direct sunlight. This will increase the life of the product and protect it from damage due to extreme weather conditions, animals, insects, etc.

To Remove Cover – Reverse installation instructions.

LIMITED WARRANTY*:

LIMITED ONE YEAR WARRANTY. WE WARRANT THIS PRODUCT AGAINST ANY MANUFACTURER DEFECTS IN MATERIALS AND WORKMANSHIP FOR PERIOD OF ONE YEAR FROM DATE OF PURCHASE FROM AUTHORIZED RETAILER TO THE **ORIGINAL OWNER**. WE WILL REPAIR OR REPLACE ANY PART FOUND DEFECTIVE IF THE UNIT CLAIMED TO BE DEFECTIVE IS RETURNED TO US POSTAGE PREPAID, WITHIN WARRANTY PERIOD. CONTACT CUSTOMER SERVICE AT [SUPPORT@NEXCAM.COM](mailto:support@nexcaml.com) FOR WARRANTY CLAIMS.

This warranty is void if any product has been subjected to misuse, abuse, neglect (including but not limited to improper maintenance or failure to follow instructions), storage, improper use, misapplication, accident, normal wear, modification, adjustment, or repair.

NO OTHER WARRANTIES WHETHER EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY TO THE PRODUCT.

LIMITATION OF LIABILITY

It is expressly understood that our liability for this product, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to repair of the product as stated above. We will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material from use of this product howsoever caused.

SERVICING YOUR PRODUCT:

If you need repairs or have warranty issues, contact Customer Service at support@Nexcaml.com for assistance.

PLEASE NOTE:

We reserve the right to make substitutions on warranty coverage for any reason, including but not limited to available parts.

*Limited Warranty to the Original Owner.

NEXCAM INC.
405 Annandale Blvd.,
Annandale, MN 55302
Email: support@Nexcaml.com
Website: <https://nexcaml.com>

